

Vantage Pro2 and Vantage Vue Stations Default Units of Measure

Function		US Stations	EU/UK Stations
		Units of Meas.	Units of Meas.
Agric.	Evapotranspiration*	inches	millimeters
	Leaf Wetness**	1	1
	Soil Moisture**	cb	cb
Bar. Press.	Barometric Pressure	inches Hg	hPa
Humidity	Inside Humidity	%	%
	Outside Humidity	%	%
	Inside Dew Point	°F	°C
	Outside Dew Point	°F	°C
Rainfall	Rainfall	inches	millimeters
	Rate of Rainfall	inches/hr	millimeters/hr
	Rain Season	January	January
Solar	Solar Radiation*	W/m ²	W/m ²
	UV Dose**	MEDs	MEDs
	UV Index*	1	1
Temperature	Inside Temperature	°F	°C
	Outside Temp. (ISS)	°F	°C
	Outside Temp.** (Temp. Stn.)	°F	°C
	Soil or Water Temperature**	°F	°C
	Outside Heat Index	°F	°C
	Wind Chill	°F	°C
Time/Date	Time	12 hour	24 hour
	Date	month/day	day/month
	Time zone	GMT-8	GMT +1
	Daylight Savings	On/Auto	On/Auto
	Latitude/Longitude	37.6N/122.1W	45.8N/6.9E
	Elevation	feet	meters
Wind	Wind Direction	degrees	degrees
	Wind Speed	mph	km/hr

* ET, Solar Radiation and Ultra-violet only applicable if Vantage Vue console is receiving from Vantage Pro2 Plus ISS

** Does not apply to Vantage Vue